

SNMPCard Account reset

www.pcmups.com.tw



Step 1 : Get **SNMPCard IP** >> Start the Netility to get the snmpcard IP

(Example : 10.192.171.136)

🔭 Netility				_ 🗆 X
Launch Web User Interface	Search	eti for device	's LAN IP	y
	Serial Number	MAC Address	IPv4 Address	
Firmware Upgrade	3927219057 3927252328	00-03-EA-14-9B-71 00-03-EA-15-1D-68	10.192.171.136 10.192.171.137	
About				
Refresh List	Hardware Version: H Firmware Version: 3. MAC Address: 00-03 LocalLink Addr:[fe8 IPv6 Addr:	CY504 8.CY504.PCM.4 8-EA-14-9B-71 0::203:eaff:fe14:9b71]		Select 1 of 2



Step 2 : Get **SNMPCard Password** >> SNMPCard Password label

(Example : B5403682)





Step 3 >> Start the browser and type <u>http://snmpcard.IP/password.cgi</u>

(snmpcar.IP from step 1)

10.192.171.136/password.cgi ×	+	0		<u>, 0</u>	<u> </u>
← → C ① ▲ 不安全 10.19	2.171.136/password.cgi	07	☆	H	:
Enter the ID and PWD info (shown of ID PWD	admin 	Web or Utility password.		Conti	nue

Step 4 >> Fill in the ID and snmpcard password

- ID : admin
- PWD : password (from step 2)

Step 5 >> Press **continue** button and **clear** it