


SNMPCard Firmware Upgrade

Step 1 : Start **Netility** application >> Button **Refresh List**

(Netility Download >> <https://www.upspowercom.com/CARD-CY504/Netility.rar>)

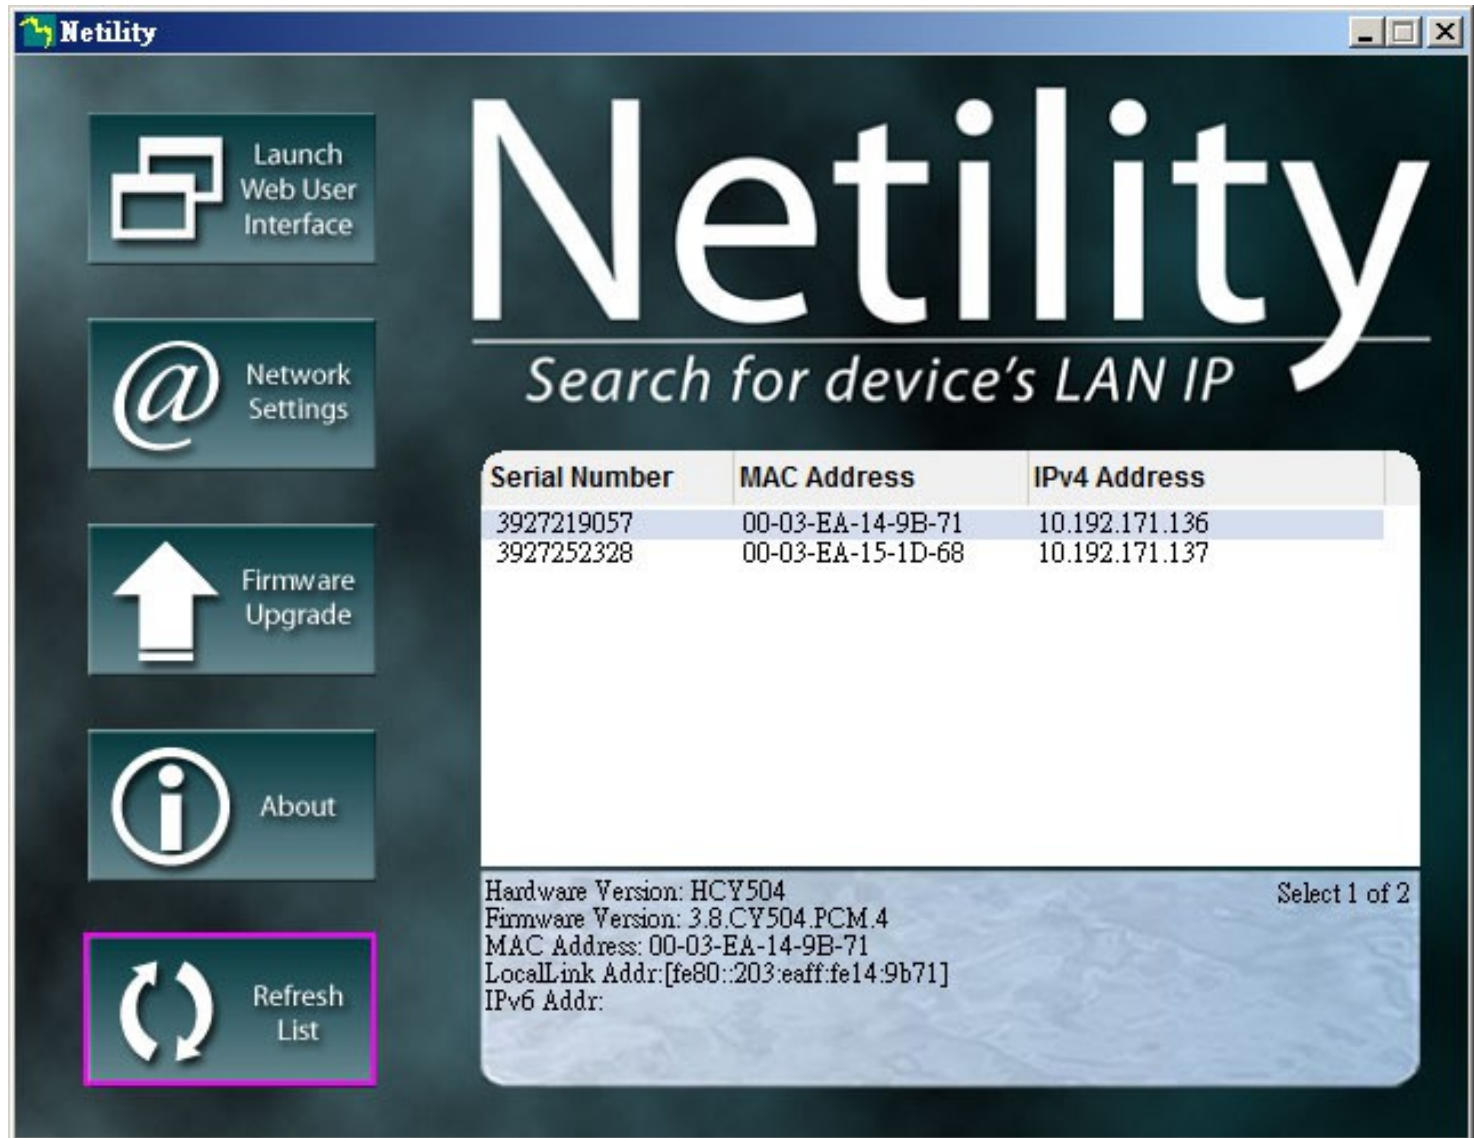


The screenshot shows the Netility application window. On the left sidebar, there are five buttons: 'Launch Web User Interface', 'Network Settings', 'Firmware Upgrade', 'About', and 'Refresh List'. The 'Refresh List' button is highlighted with a pink border. The main area displays the 'Netility' logo and the text 'Search for device's LAN IP'. Below this is a table with three columns: 'Serial Number', 'MAC Address', and 'IPv4 Address'. The table contains two rows of data. At the bottom of the main area, there is a status bar showing hardware and firmware information, and a 'Select 1 of 2' indicator.

Serial Number	MAC Address	IPv4 Address
3927219057	00-03-EA-14-9B-71	10.192.171.136
3927252328	00-03-EA-15-1D-68	10.192.171.137

Hardware Version: HCY504
Firmware Version: 3.8.CY504.PCM.4
MAC Address: 00-03-EA-14-9B-71
LocalLink Addr:[fe80::203:eaff:fe14:9b71]
IPv6 Addr:

Select 1 of 2

Step 2 : Button **Firmware Upgrade** >> Choose the snmpcard firmware

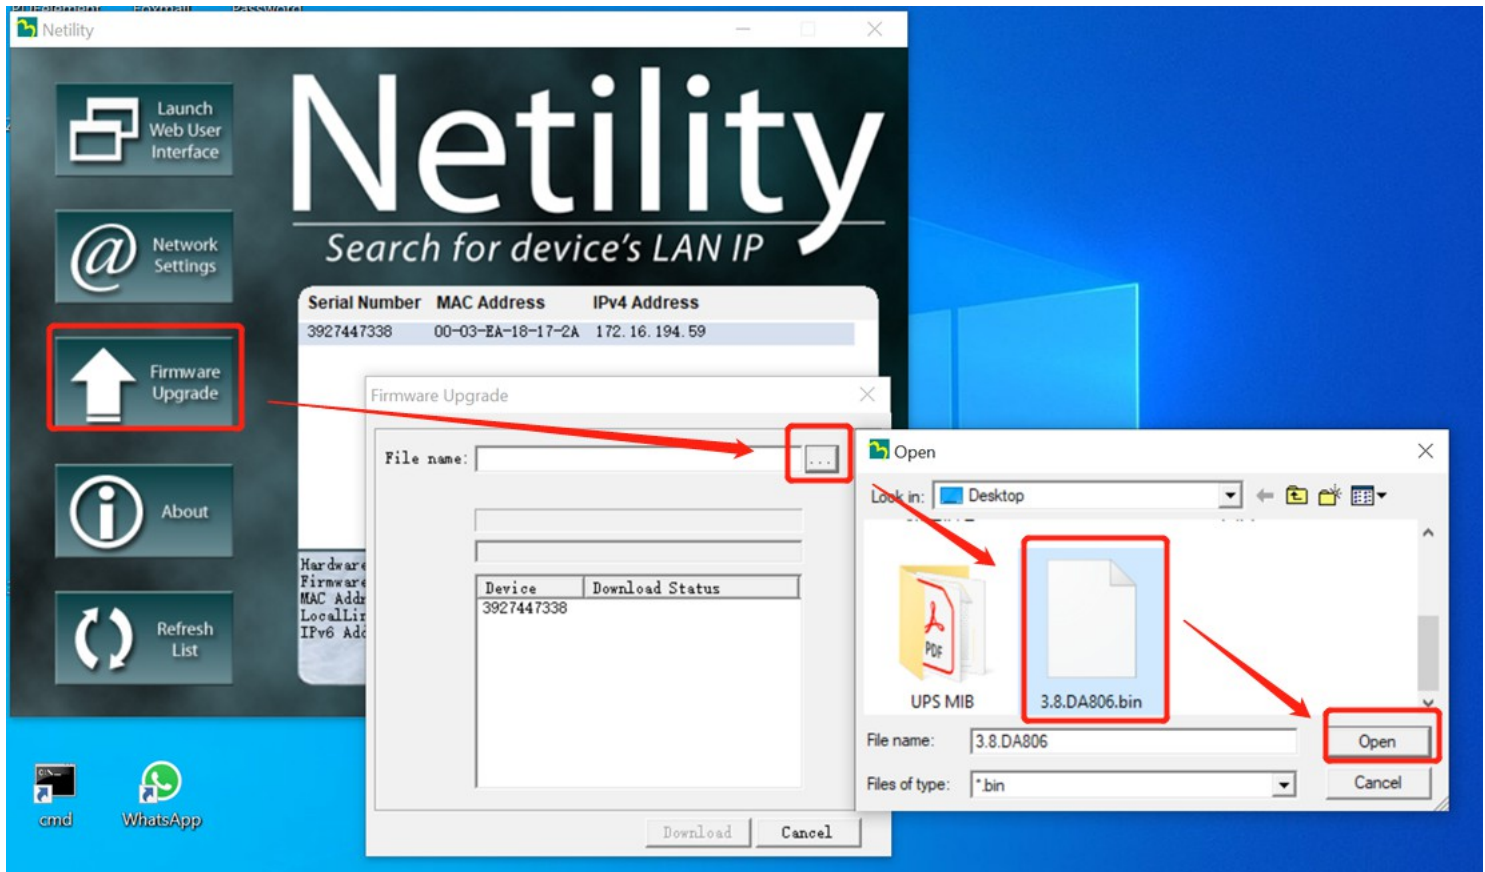

Step 3 >> Downloda Successfully

