


Quick Setup of the SNMP Box

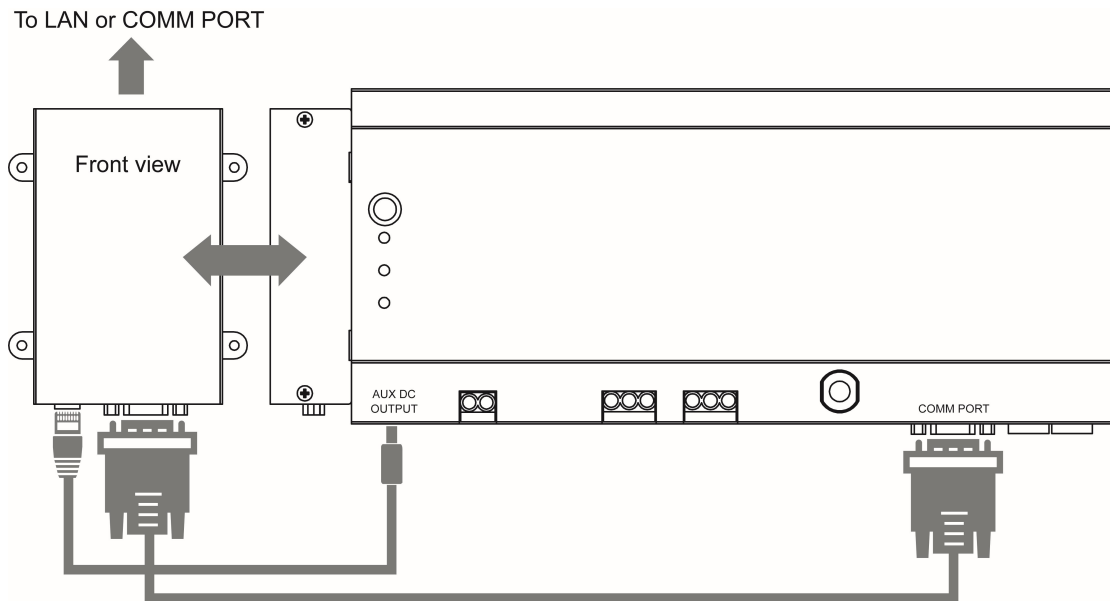

1. Follow the picture, connect the Power-cord and RS232 cable from the UPS to the SNMP box.
2. Plug in the RJ45 network cable to the SNMP Box.
3. Power-on the UPS
4. Confirm the LED on the SNMP box is flashing.
5. Install the software “**Netility**” on the computer.
6. Use the software “**Netility**” to scan the IP of SNMP card.
7. Start to browser the IP of SNMP card to get the status of UPS.