

U P S

Line-Interactive

600VA-3000VA

KIN-600AP RM KIN-1000AP RM

KIN-1500AP RM KIN-2200AP RM

KIN-3000AP RM

■ USER MANUAL ■

EMC Statement

These products are tested and thereby comply with the conditions of CE regulation, which established to offer sufficient protection against dangerous interference for installation. Installation and use of the equipment should comply with the instructions provided to avoid such interference due to the amount of radiofrequency energy that generates by the equipment; Despite this, we cannot assure that a certain amount of interference may not occur in some installations.

If by turning on and off, you conclude that the equipment's harmful interference influences your radio or television reception, use one of the following preventive measures:

- Place the receiving antenna in a separate location or orientation
- Ensure a greater distance between the receiver and the equipment
- Ensure that your Equipment connects to an outlet on a separate circuit
- Contact a technician experienced with radio and TV or the dealer for technical assistance

Declaration of Conformity Request

Units labelled with a CE mark comply with the following standard and directives:

- EMC Directive 2014/30/EU
- LVD Directive 2014/35/EU
- Safety: EN 62040 - 1
- EMC: EN 62040 - 2

The EC Declaration of Conformity is available upon request for production with a CE mark.

Table of content

EMC Statement	1
1. IMPORTANT SAFETY INSTRUCTION	1
2. Introduction	2
3. Installation	3
4. Operation	6
5. UPS Monitoring Connection.....	8
6. Maintenance	9
APP-A. Troubleshooting	9
APP-B Technical Specifications	11

INSTRUCTIONS DE SÉCURITÉS IMPORTANTES CONSERVER CES INSTRUCTIONS

Le présent manuel contient des instructions importantes qui devraient être suivies Durant l'installation et l'entretien de l'UPS et de la batterie.

Ces appareils sont conçus pour être installés à l'intérieur, dans un endroit à température contrôlée et à environnement non conducteur.

Toute intervention sur les batteries devra être effectuée ou surveillée par un personnel qui connaît les batteries et qui prend les précautions requises.

Interdire à tout personnel non autorisé de toucher aux batteries.

Pour le remplacement, utiliser le même nombre de batteries du modèle.

ATTENTION – Éviter de jeter la batterie dans un feu, car elle risque d'exploser.

ATTENTION – Ne jamais ouvrir ou endommager la batterie, l'électrolyte libéré est nocif pour la peau et les yeux.

ATTENTION – Les batteries peuvent causer un choc électrique ou provoquer des courants élevés de court-circuit.

Veuillez observer les précautions suivantes:

A. Enlever montres, bagues et tout objet métallique.

B. Utiliser des outils à poignée isolée.

C. Porter des gants et des bottes en caoutchouc.

D. Éviter de déposer des outils ou des pièces métalliques sur le dessus de la batterie.

E. Débrancher la source de charge avant de brancher ou de débrancher les bornes de batterie.

ATTENTION - 3000VA-Afin de réduire les risques d'incendie, ne raccordez qu'à un circuit muni d'une protection de surintensité du circuit de dérivation maximum de 30 ampères conformément au Code Électrique National (National Electrical Code) des États-Unis, ANSI/NFPA 70.

La protection de surintensité de sortie ainsi que le sectionneur doivent être fournis par des tiers.

1. IMPORTANT SAFETY INSTRUCTIONS

WARNING: SAVE THESE INSTRUCTIONS!!







- **WARNING:** This Manual Contains Important Instructions that should be Followed during Installation and Maintenance of the UPS and Batteries. Follow this instruction at all time.
- **WARNING:** It is recommended to install UPS in an ANSI/NFPA75 room in which temperature and humidity are controlled and free from electrically conductive particles. **DO NOT** expose UPS to direct sunlight or high heat source; **DO NOT** block off ventilation opening around the housing.
- **CAUTION:** Before conducting maintenance, repair, or shipment, please turn off everything completely and disconnect them.
- **CAUTION:** The UPS is **NOT** applicable for any inductive loads such as motors or domestic appliances like hairdryers, speakers, and fluorescent lamps.
- **CAUTION:** All interconnection and power cable should be connected **ONLY AFTER** the UPS shut down and disconnected from main.
- **CAUTION:** Only use No.26 AWG or larger certified cables to connect UPS and device
- **CAUTION:** **DO NOT** unplug UPS from main power during operation or protective ground will fail. **DO NOT** disconnect battery under load or shut down may occur.
- **CAUTION:** Ensure the total leakage current of UPS and the connected equipment under 3.5mA.
- **CAUTION:** Ensure UPS connects to grounded main power with a fuse or circuit breaker protection.
- **CAUTION:** Dangerous amount of voltage might still exist even the UPS disconnects from the main power since residual voltage exists due to battery supply.
- **CAUTION:** Beware of all the details on the cautionary sticker located on UPS.
- **CAUTION (No user-serviceable parts):** Do not attempt to remove the unit's cover, no user-serviceable parts inside. Please refer all service to qualified service technicians.
- **CAUTION: DO NOT** Dispose of Battery or Batteries in a Fire. The Battery May Explode..
- **CAUTION: DO NOT** Open or Mutilate the Battery or Batteries. Released Electrolyte is Harmful to the Skin and Eyes. It May be Toxic.
- **User's operations:** Users only permits to:
 - Turning the UPS unit on and off.
 - Operating the user interface.
 - Connecting data interface cables.
 - Changing the batteries
- **CAUTION:** Battery can cause shock and short circuit current. When servicing batteries:
 - A. Remove watches, rings, or other metal objects.
 - B. Use tools with insulated handles.
 - C. Wear rubber gloves and boots.
 - D. Please **DO NOT** place any tools or metal parts on top of batteries.
 - E. Disconnect charging source before connecting/disconnecting battery terminals
 - F. Servicing of Batteries Should be Performed or Supervised by Personnel Knowledgeable of Batteries and the Required Precautions. Keep Unauthorized Personnel Away from Batteries.
- **DANGER:** Hazardous electric component inside this unit (example: Heat-sinks) remain energized from the battery supply even when the main power is disconnected.
- **DANGER:** Battery circuit is not isolated from the AC input. Hazardous voltage may exist at battery terminals and ground—test for safety before any direct contact.
- **CAUTION:** Remove the battery's pole during service inside the battery cabinet or UPS.
- **CAUTION:** **ONLY** replace batteries with the same type and quantity.
- **WARNING (Fuses):** Ensure fuse replacement with the same type and rating **ONLY**.
- **CAUTION:** Intend for Installation in a Controlled Environment.
- **CAUTION:** Maximum ambient temperature 35°C" (or "0 ~ 35°C" for Ambient Operation).
- **CAUTION:** To reduce the risk of fire, connect only to a circuit provided with 30 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70.

2. Introduction

The information provided in this manual covers Line-Interactive 600-3000VA uninterruptible power system (UPS). This manual contains basic functions, operating procedures, and emergencies, also including information on how to ship, store, handle, and install the equipment. Only detailed requirements of the UPS units described herein. The installation must carry out according to this manual. The electrical installation must further comply with local legislation and regulations.


3. Installation

3.1 Hardware Installation

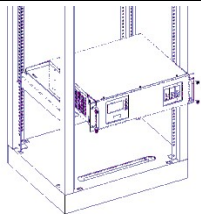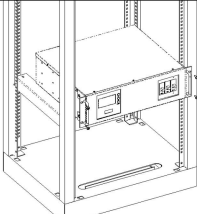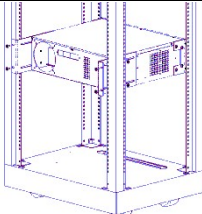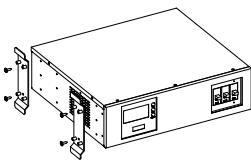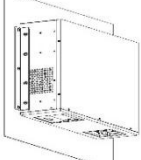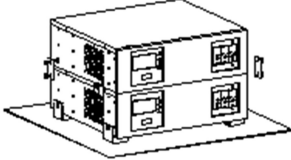
Bottom plate installation RMB-05 X1 SET.	Bottom bracket installation. RMB-06(1U) or -07(2U~4U) X2PCS	Rear bracket Installation RMB-01(1U),02(2U), 03(3U),-04(4U) X2 PCS.
		
Bottom plate installation RMB-08(1U),09(2U),10(3U),11(4U)	Installation with the bottom bracket. Part RMB-12 X2 PCS	Rear bracket installation. RMB-13, -14 X 4 PCS.
		

3.2 Rear panel view

600-1KVA

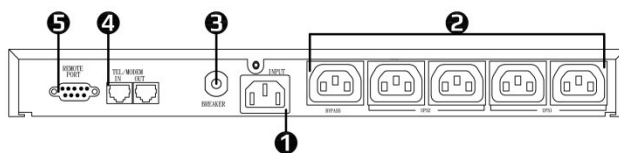


IEC Type

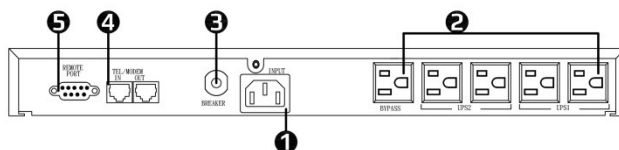


NEMA Type(1.2KVA)


1.2K-1.5KVA

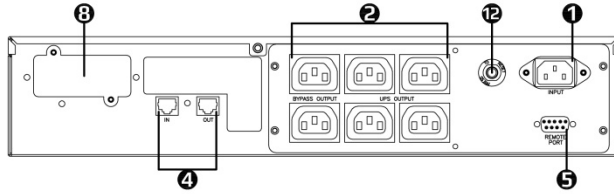

IEC Type

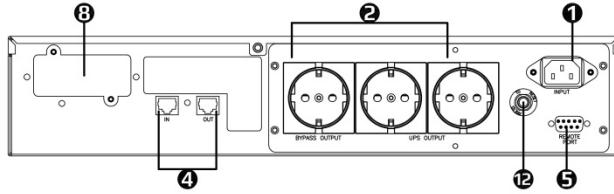


Schuko Type

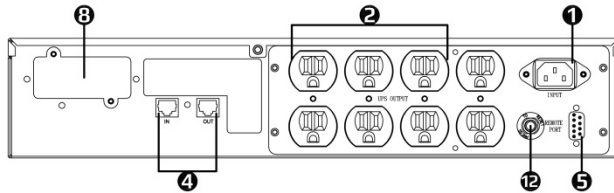

NEMA Type(1.2KVA)


1.2K-1.5KVA

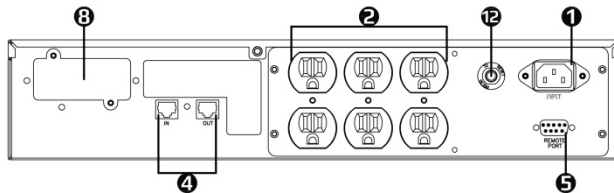


NEMA Type(1.5KVA)

- | | |
|------------------------------------|---------------------------------|
| ① Input | ⑧ Interface port (optional) |
| ② Outlet | ⑨ EPO (optional) |
| ③ Input breaker | ⑩ Maintenance switch (optional) |
| ④ Network transient protector | ⑪ Terminal block |
| ⑤ RS232 port | ⑫ Reset |
| ⑥ USB (optional) | ⑬ Outlet breaker |
| ⑦ External battery port (optional) | |

2.2K-3KVA

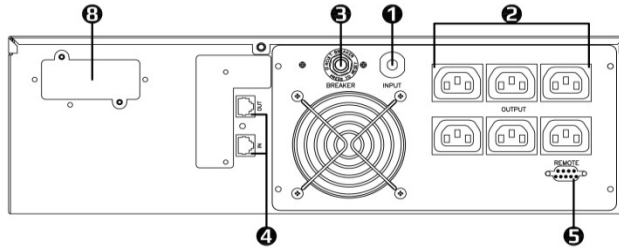


IEC Type

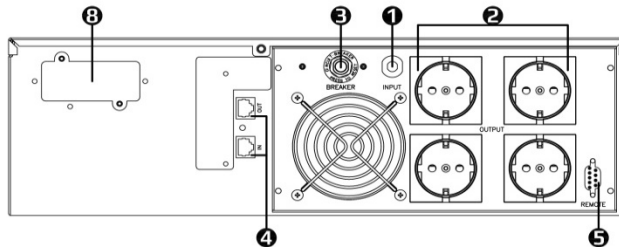

Schuko Type

2.2K-3KVA

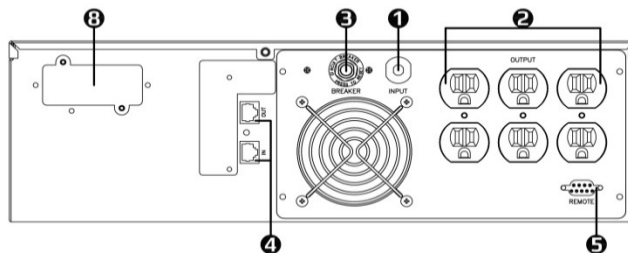

NEMA Type(1.2KVA)

***Figures only display available function; functions are not on unit if not marked.**

3.3 Connection to Main and Load

- Follow all installation and safety instructions very carefully; failure to do so may cause hazardous situations to personnel and equipment.
- Ensure the main power voltage matches with UPS. (110V/220V)
- For electrical installation, closely observe the nominal current rating of the source.
- Check the equipment's power requirement to prevent overloading situations.
- Do not connect devices that draw either massive power shortly or half-wave rectified current - such as hairdryer, vacuum cleaner, laser printer, and plotter.

Note: Although you may use the UPS immediately, maximum back up time will not be available yet. It is recommended to charge the batteries for a minimum of 8 hours before use

- Connect the input cable to the UPS and the other end to the mains. The battery will automatically charge when connecting to the main power.
- Connect the loads to the UPS; Ensure receptacles are connected firmly.
- (Optional) To protect your telecom/internet system, use RJ45/RJ11 cable to install the input/output cable with matching in/out jack.

4. Operation

Necessary information for the operation of the unit is covered in this chapter. Normally UPS runs automatically, but on a few occasions such as just after installation, all procedures are described herein.

4.1 General Description

As Line-Interactive UPS, it is capable of providing clean and stable power to your critical system. While the UPS regulates and filters power fluctuation, it also keeps the battery charged for any emergency.

- Automatic transformer regulates over and under-voltage power.
- During a power failure, the UPS immediately provides backup power from the battery to support your essential equipment.
- Power transference is typically achieved uninterrupted within 4 milliseconds.

Line-Mode/Battery-Mode

UPS will operate in Line-Mode that supports power and charge battery while connected to power. During a power failure, the UPS will switch to Battery-Mode, in which power is maintained from the battery. In case of failure time exceed Battery-Mode duration, UPS will shut down until voltage return to prevent battery discharge.

Diagnostic Test


The diagnostic test automatically executes to check and report UPS status. While the advanced battery management system monitors the conditions of the batteries, it sends early warnings if a battery replacement is needed. Diagnostic tests can also be performed by manual control.

4.2 System Configuration

The UPS device and battery make up the system. Depending on site and load requirements, certain additional options are available as tailored solutions. Please consider the following when planning your UPS system:





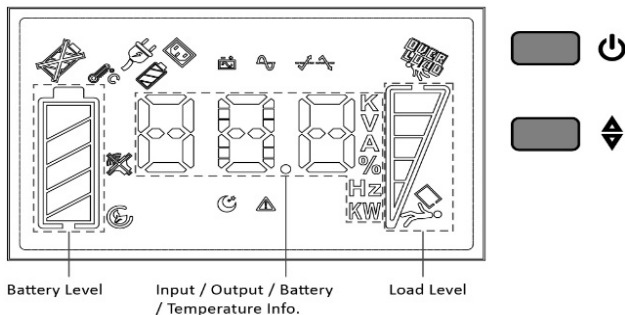












- The total demand for the protected system shall dictate the output power rating (VA). When measuring demand, please allow a margin for future expansion and calculation error.
- Battery-mode duration needs dictate the battery size. If the load is less than the UPS nominal power rating, then the actual backup time is longer.
- The following options are available:
- Connectivity options (relay card, SNMP/WEB card)

4.3 Panel overview



4.4 UPS Control

Control panel functions

Display	Function Description	Display	Function Description
LCD Display			
	<u>Battery Fault</u> Battery failure Check/replace your battery		<u>Battery Mode</u> UPS operating with battery power
	<u>Line Mode</u> UPS operating with Main power		<u>Temperature</u> Display UPS current temperature (Celsius)
	<u>Input</u> Indicating UPS input power for status display		<u>Green Function</u> UPS Operating with Green mode enabled
	<u>Output</u> Indication of UPS output power for status display		<u>Silence</u> UPS Silent mode enabled
	<u>Battery Power Indication</u> 0-20/21-40/41-60/ 61-80/81-100% remaining		<u>UPS Load Level</u> UPS on 0-24/25-49/50-74/75-100% Load level
	<u>AVR Buck</u> Correcting over-voltage condition. Output power remain normal		<u>AVR Boost</u> Correcting under-voltage condition. Output power remain normal
	<u>Standby Mode</u> UPS stand by due to battery depletion or software setting. Will return operational after power restore		<u>Overloading</u> UPS output exceeds capacity.
	<u>Battery</u> Indicating UPS battery for status display		
Button Display			
	<u>ON/OFF/TEST/Silence button</u> The master button for UPS control Refer to Button peration		<u>Select Button</u> Use for UPS selection Refer to Button Operation

Button operation

Cold Start function

When the main power is disconnected from UPS, it is capable of starting with battery power for users' needs. Simply start the UPS as the instruction below.

"On/Off/Test/Silence" button

- Press and hold the button for 1 second to turn on UPS
- Press and hold the button for 3 seconds to turn off UPS during operation.
- Press once to start self-test function during Line-Mode
- Press once to enable/disable alarm buzzer during Battery-Mode
- "Select" button.

Press this button to view UPS information on LCD Display.

Green mode

The Green mode feature will enable UPS no-Load or light-load shutdown to maintain power consumption and battery life. During battery mode, the UPS will shut down approximately 4 min with no load/light load operating.

Green mode can also be enabled or disabled via monitoring software.







When turning on UPS, keep holding the “On” button until the follow-up alarm occurred. The UPS will switch mode and retain settings until the next manual adjustment.

Green Mode enable: Triple Beep

Green Mode disable: Double Beep

4.5 UPS Status Display

UPS status shows in normal display mode. From here, you can go to the UPS meter display by pressing the button. Various measurements are available through UPS meters display; Pressing the button will scroll through the following meters.

LCD message	Description
 "xxx, V	Shows Output voltage
 xx,x Hz	Shows Output Frequency
 xxx, V	Shows Input AC voltage
 xx,x Hz	Shows Input Frequency
 LOAD%= xx%	Shows Load % of max load
 XX C	Shows approximate ambient temperature

4.6 UPS Configuration

UPS Manual test

Manual tests for UPS or battery can be conducted from the UPS configuration as well and are functional even when the UPS is not charging the battery.

Simple test: It's recommended to conduct a simple simulation test when

1. The first use of UPS.
2. Adding new loads.
3. 6 months' regular check-up

Switch on the UPS and wait for the power indicator to light up, then unplug UPS to simulate the main power failure.

Manual Battery Test: Press the “test” button once. UPS will automatically conduct a self-test. Please note that the UPS will briefly switch to battery mode.

5. UPS Monitoring Connection

UPSMON Pro software (Or other power monitoring software) can further utilize the UPS with warning reminders, monitoring, control shut down, and setting adjustments.

Using monitoring features requires connecting the UPS to a computer or the internet

5.1 Connect UPS to Computer with USB (Optional)/RS232 port.

- Locate the USB/RS232 port on UPS.
- Connect with factory-provided/approved communication cable
- Ensure your computer can install and support power management software.
- **Note:** Either USB Port or RS232 port, only one port will function at a time.

5.2 Connect UPS with interface Slot(Optional)

- **SNMP Card** allows UPS management and monitoring over a network or internet
- For more information, please contact for technical assistance.

5.3 UPS RS232 PORT

- The RS-232 interface uses a 9-pin female D-sub connector.
- The RS-232 port carries the data about utility, load, and UPS.

Detail information about interface ports pins and their functions are available upon request. Please contact for technical assistance.

6. Maintenance

Please read the following instruction to ensure your safety and maintain a longer product lifetime. This section contains detailed information about moving, maintaining, and placing the UPS. With a minimal amount of maintenance, you can expect the UPS to function smoothly.

6.1 Transportation

Please handle UPS with extreme caution since a high amount of energy is within the batteries. Keep the unit in position as marked on the packaging and never drop the unit.

6.2 Storage

Please read the following instructions if the UPS is not installed immediately:

- Store the equipment as is in its original packing and shipping carton.
- Do not store in temperatures outside the range of +15°C to +25°C.
- Protect the equipment from wet or damp areas and moist air.
- To maintain the vitality of the batteries, please recharge the UPS at least 8 hours every six months.

6.3 Operation

CAUTION: Ensure that all environmental concerns and requirements are met according to safety instruction; otherwise, the safety of installation personnel cannot be guaranteed since the unit may malfunction.

- Please ensure no flammable substances such as gases or fumes.
- Avoid extreme temperature and humidity. Protect the equipment from moisture.
- Ensure there is enough space (300mm or above recommended) at the rear and side of UPS for proper ventilation.
- Ensure that the front of the UPS remains clear for user operation.
- **Only** authorized agents or technicians may service the unit.
- **Do not** open the UPS cabinet. Components may contain hazardous or fatal voltage.
- Output receptacles may carry live voltage without connecting to the main power.
- Pay special attention to UPS air inlet; **do not** let it covered by dust.

6.4 Battery

6.4.1 Maintenance

The reliability of the battery is heavily related to the environmental issue.

At the temperature of 25 degrees Celsius, A regular 6-12 months' checkup is advised.

6.4.2 Replacement

Please contact for technical assistance.

APP-A. Troubleshooting

Troubleshooting procedures give simple instructions in determining UPS malfunctions. Start the troubleshooting procedure if you witness any alarm indication.

Alarm

The UPS has an audible alarm. When different situations occurred, UPS will alert users with display and buzzer.

Battery-mode (Slow alarm)

During battery mode, the alarm will beep every 2 seconds. The alarm will stop when UPS return to Line-mode.

Battery-Low (Rapid alarm)

During Battery-low (less than 30%), the UPS will beep every 0.5 seconds. The alarm will stop when UPS shutdown or returns to Line-mode.

Overload/Fault (Constant alarm)

When UPS operating with load exceeded its maximum capacity, UPS will emit a continuous alarm to warn an overload condition. UPS will automatically turn off to protect your essential load. Please consider remove or shutdown less-essential loads.

Also, when the unit encounters other problems (battery failure, charger failure), the unit emits the alarm. Please refer to the function description and troubleshooting chart to identify the precise cause.

Silencing Alarm

Here is the instruction to mute the active alarm or future alarm notification:

Note: During battery-mode, if the battery is low on power, the alarm will sound regardless of silent-mode enable/disable.

If troubleshooting does not include or resolve your situation, feel free to contact for technical assistance.

PROBLEM	POSSIBLE CAUSE	Solutions
UPS can't operate switching on. No lights on, no warning sounds appear	Power source mistake or low battery power	Check main power source connection If operating with battery power, ensure enough charging time for UPS.
	Time of pressing the button is too short	Press and hold the "ON" button for a longer duration
	Output short circuit or overload on UPS	Turn off UPS and take off all load Check for any potential internal short circuit Then attempt to turn on UPS again
	Hardware failure	Contact for technical assistance
	Battery out of order	Replace battery or contact for technical assistance.
UPS always remain on battery-mode regardless of main power connection	No power source input	Check the main power source and cable
	Fuse melted or Circuit breaker tripped	Reset the breaker or replace the fuse (spare fuse is in UPS inlet.) then restart the UPS
	The main voltage is out of the UPS input range.	UPS functions normally, check your main power voltage.
Overload indicator lit or constant buzzer beeping	UPS load exceed capacity; UPS overloading	Remove or shut down the less essential load
Battery mode duration below expectation	Batteries aren't fully charged Batteries are worn out or faulted	Ensure enough recharge time for UPS. Run a self-test to check battery status. Replace UPS battery if result remain nsatisfied
	The charger is out of order	Contact for technical assistance
	Green mode enabled. No-load or light load shutdown engaged.	Operation normal. Turn off green mode to disable such function
The battery fault indicator occurred	Battery not connected	Check the UPS batteries; make sure they are well connected.
	Battery out of order or damaged	Replace battery
Fault indicator or all indicator are flashing	Hardware failure	Contact for technical assistance

APP-B Technical Specifications

Model	600	1000	1200	1500	2200	3000
Configuration						
Capacity (VA)	600 VA	1000 VA	1200 VA	1500 VA	2200 VA	3000 VA
Capacity (Watts)110V/220V	360W/480W	600W/800W	720W/960W	900W/1200W	1320W/1760W	1800W/2400W
Form	Rack Type					
Input						
Voltage 110V / 220V	100 / 110 / 115 / 120 VAC / 220 / 230 / 240 VAC					
Input Voltage Range 110V	75 - 150 VAC					
Input Voltage Range 220V	165 - 300 VAC					
Input Frequency Range	50 Hz / 60 Hz (Auto Sensing)					
Output						
Waveform	Simulated Sine Wave					
Voltage 110V / 220V	100 / 110 / 115 / 120 VAC / 220 / 230 / 240 VAC					
Frequency	50 Hz / 60 Hz ± 0.5 Hz					
Transfer Time	2 - 4 ms (Typical)					
Protection						
Full Protection	Overload, Surge, Short Circuit					
Tele Communication	RJ11 / RJ45					
Battery						
Type & Quantity	6V 7Ahx2	6V 8Ahx3	12V 7Ahx2	12V 9Ahx2	12V 7Ahx4	12V 9Ahx4
Sealed, Maintenance Free	Yes					
Typical Recharge Time	8 hr to 90%					
Management & Communication						
Indicator 110V	LED Panel					
Indicator 220V	LED Panel		LED / LCD Panel			
Communication Port 110V	RS232 or USB (B-type)		RS232, USB (B-type)			
Communication Port 220V	RS232 or USB (B-type)		RS232, USB (B-type) & SNMP			
Physical						
Dimensions (WxDxH) (mm)	380 x 365 x 42		428 x 357 x 84		428 x 353 x 130	428 x 486 x 130
Weight (kgs)	9.4	11.5	15.9	16.8	28.4	32.7
Shipping Dimensions (mm)	478 x 438 x 161		574 x 522 x 202		574 x 522 x 248	663 x 583 x 285
Shipping Weight (kgs)	11	13	18.5	19.7	31.1	36.3
Alarm						
Overload / Fault	Continuous Beeping					
Battery Mode	Beep every 2 seconds					
Low Battery	Beep every 0.5 second					
Environment						
Operating Humidity	0-90 % RH at 0-40°C (Non-condensing)					
Audible Noise	Less than 40 dB					

* Specifications are subject to change without further notice.

* Specifications are for reference, please refer to information based on real product.

20230209