

# U P S

**Line-Interactive**

**1KVA-3KVA**

**■ USER MANUAL ■**

## EMC Statement

These products are tested and thereby comply with the conditions of CE regulation, which established to offer sufficient protection against dangerous interference for installation. Installation and use of the equipment should comply with the instructions provided to avoid such interference due to the amount of radiofrequency energy that generates by the equipment; Despite this, we cannot assure that a certain amount of interference may not occur in some installations.

If by turning on and off, you conclude that the equipment's harmful interference influences your radio or television reception, use one of the following preventive measures:

- Place the receiving antenna in a separate location or orientation
- Ensure a greater distance between the receiver and the equipment
- Ensure that your Equipment connects to an outlet on a separate circuit
- Contact a technician experienced with radio and TV or the dealer for technical assistance

### Declaration of Conformity Request

Units labelled with a CE mark comply with the following standard and directives:

- EMC Directive 2014/30/EU
- LVD Directive 2014/35/EU
- Safety: EN 62040 - 1
- EMC: EN 62040 - 2

The EC Declaration of Conformity is available upon request for production with a CE mark.

## Table of content

|   |          |
|---|----------|
| EMC Statement.....  | 1        |
| 1. IMPORTANT SAFETY INSTRUCTION .....                           | 3        |
| 2. Introduction .....   | 4        |
| 3. Installation .....   | 4        |
| 3.1 Rear panel view(For reference only) .....                   | 4        |
| 3.2 Connection to Main and Load .....                           | 5        |
| 4. Operation.....   | 5        |
| 4.1 General Description .....                                   | 5        |
| 4.2 System Configuration .....                                  | 6        |
| 4.3 UPS Control .....   | 6        |
| 4.4 UPS Configuration .....                                     | 7        |
| 4.5 UPS Status Display.....                                     | 7        |
| 4.6 UPS Configuration .....                                     | 8        |
| 5. UPS Monitoring Connection .....                              | 8        |
| 5.1 Connect UPS to Computer with USB (Optional)/RS232 port..... | 8        |
| 5.2 Connect UPS with interface Slot(Optional) .....             | 8        |
| 5.3 UPS RS232 PORT .....  | 8        |
| 6. Maintenance.....   | 9        |
| 6.1 Transportation .....  | 9        |
| 6.2 Storage .....   | 9        |
| 6.3 Operation .....   | 9        |
| 6.4 Battery.....  | 9        |
| <b>6.4.1 Maintenance .....</b>                                  | <b>9</b> |
| <b>6.4.2 Replacement .....</b>                                  | <b>9</b> |
| APP-A. Troubleshooting.....                                     | 10       |
| APP-B Technical Specifications .....                            | 11       |

# 1. IMPORTANT SAFETY INSTRUCTION

## WARNING: SAVE THESE INSTRUCTIONS!!

- **WARNING: Manual contains important instructions of UPS and batteries during installation and maintenance. Follow this instruction at all time**
  - **WARNING:** It is recommended to install UPS in an ANSI/NFPA75 room in which temperature and humidity are controlled and free from electrically conductive particles. **DO NOT** expose UPS to direct sunlight or high heat source; **DO NOT** block off ventilation opening around the housing.
  - **CAUTION:** Before conducting maintenance, repair, or shipment, please turn off everything completely and disconnect them.
  - **CAUTION:** The UPS is **NOT** applicable for any inductive loads such as motors or domestic appliances like hairdryers, speakers, and fluorescent lamps.
  - **CAUTION:** All interconnection and power cable should be connected **ONLY AFTER** the UPS shut down and disconnected from main.
  - **CAUTION:** Only use No.26 AWG or larger certified cables to connect UPS and device.
  - **CAUTION: DO NOT** unplug UPS from main power during operation or protective ground will fail. **DO NOT** disconnect battery under load or shut down may occur.
  - **CAUTION:** Ensure the total leakage current of UPS and the connected equipment under 3.5mA.
  - **CAUTION:** Ensure UPS connects to grounded main power with a fuse or circuit breaker protection.
  - **CAUTION:** Dangerous amount of voltage might still exist even the UPS disconnects from the main power since residual voltage exists due to battery supply.
  - **CAUTION:** Beware of all the details on the cautionary sticker located on UPS.
  - **CAUTION (No user-serviceable parts):** Do not attempt to remove the unit's cover, no user-serviceable parts inside. Please refer all service to qualified service technicians.
  - **CAUTION: DO NOT** dispose UPS and its batteries to fire, the battery may explode.
  - **CAUTION: DO NOT** attempt to open or mutilate the battery.
  - **User's operations:** Users only permits to:
    - Turning the UPS unit on and off.
    - Operating the user interface.
    - Connecting data interface cables.
    - Changing the batteries.
  - **CAUTION:** Battery can cause shock and short circuit current. When servicing batteries:
    - A. Remove watches, rings, or other metal objects.
    - B. Use tools with insulated handles.
    - C. Wear rubber gloves and boots.
    - D. Please **DO NOT** place any tools or metal parts on top of batteries.
    - E. Disconnect charging source before connecting/disconnecting battery terminals.
    - F. Servicing of batteries should be performed or supervised by personnel with necessary precautions and knowledge. Keep unauthorized personnel away from batteries.
  - **DANGER:** Hazardous electric component inside this unit (example: Heat-sinks) remain energized from the battery supply even when the main power is disconnected.
  - **DANGER:** Battery circuit is not isolated from the AC input. Hazardous voltage may exist at battery terminals and ground—test for safety before any direct contact.
  - **CAUTION:** Remove the battery's pole during service inside the battery cabinet or UPS.
  - **CAUTION: ONLY** replace batteries with the same type and quantity.
- WARNING (Fuses):** Ensure fuse replacement with the same type and rating **ONLY**.


## 2. Introduction

The information provided in this manual covers Line-Interactive 1-3KVA uninterruptible power system (UPS). This manual contains basic functions, operating procedures, and emergencies, also including information on how to ship, store, handle, and install the equipment. Only detailed requirements of the UPS units described herein. The installation must carry out according to this manual. The electrical installation must further comply with local legislation and regulations.

## 3. Installation


### 3.1 Rear panel view(For reference only)

1K

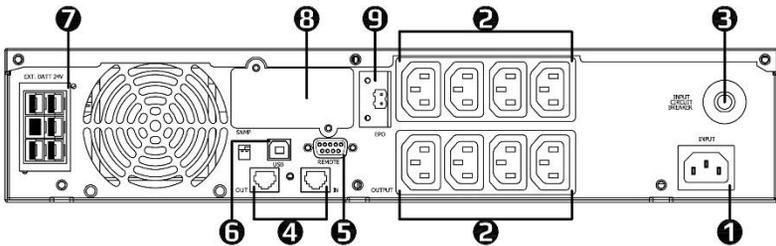


IEC Type

1.5KVA

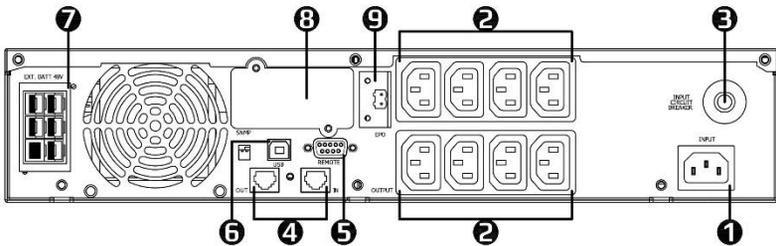


IEC Type

2KVA

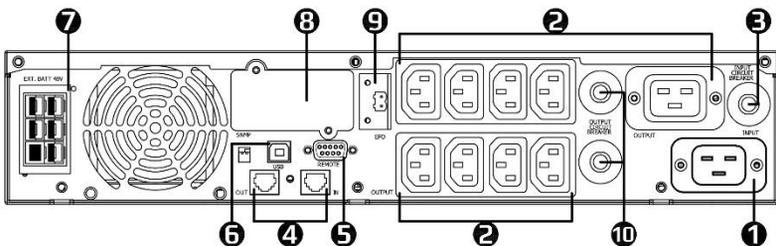

IEC Type

# 3KVA

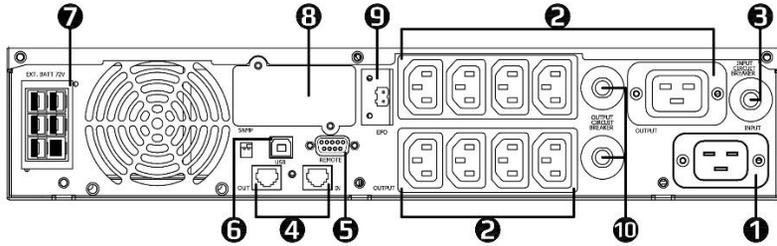

IEC Type

- |                               |                                    |
|-------------------------------|------------------------------------|
| 1 Input                       | 6 USB                              |
| 2 Outlet                      | 7 External battery port (optional) |
| 3 Input breaker               | 8 Interface port (optional)        |
| 4 Network transient protector | 9 EPO (optional)                   |
| 5 RS232 port                  | 10 Outlet breaker                  |

**\*Figures only display available function; functions are not on unit if not marked.**

## 3.2 Connection to Main and Load

- Follow all installation and safety instructions very carefully; failure to do so may cause hazardous situations to personnel and equipment.
- Ensure the main power voltage matches with UPS. (110V/220V)
- For electrical installation, closely observe the nominal current rating of the source.
- Check the equipment's power requirement to prevent overloading situations.
- Do not connect devices that draw either massive power shortly or half-wave rectified current - such as hairdryer, vacuum cleaner, laser printer, and plotter.

**Note:** Although you may use the UPS immediately, maximum back up time will not be available yet. It is recommended to charge the batteries for a minimum of 8 hours before use

- Connect the input cable to the UPS and the other end to the mains.
- The battery will automatically charge when connecting to the main power.
- Connect the loads to the UPS; Ensure receptacles are connected firmly.
- (Optional) To protect your telecom/internet system, use RJ45/RJ11 cable to install the input/output cable with matching in/out jack.

## 4. Operation

Necessary information for the operation of the unit is covered in this chapter. Normally UPS runs automatically, but on a few occasions such as just after installation, all procedures are described herein.

### 4.1 General Description

As Line-Interactive UPS, it is capable of providing clean and stable power to your critical system. While the UPS regulates and filters power fluctuation, it also keeps the battery charged for any emergency.

- Automatic transformer regulates over and under-voltage power.
- During a power failure, the UPS immediately provides backup power from the battery to support your essential equipment.
- Power transference is typically achieved uninterrupted within 4 milliseconds.

### Line-Mode/Battery-Mode

UPS will operate in Line-Mode that supports power and charge battery while connected to power. During a power failure, the UPS will switch to Battery-Mode, in which power is maintained from the battery. In case of failure time exceed Battery-Mode duration, UPS will shut down until voltage return to prevent battery discharge.

### Diagnostic Test

The diagnostic test automatically executes to check and report UPS status. While the advanced battery management system monitors the conditions of the batteries, it sends early warnings if a battery replacement is needed. Diagnostic tests can also be performed by manual control.

### 4.2 System Configuration

The UPS device and battery make up the system. Depending on site and load requirements, certain additional options are available as tailored solutions. Please consider the following when planning your UPS system:

- The total demand for the protected system shall dictate the output power rating (VA). When measuring demand, please allow a margin for future expansion and calculation error.
- Battery-mode duration needs dictate the battery size. If the load is less than the UPS nominal power rating, then the actual backup time is longer.
- The following options are available:  
Connectivity options (relay card, SNMP/WEB card)

### 4.3 UPS Control

#### Control panel functions

| Display   | Function Description  | Display   | Function Description   |
|---|---|---|--|
| <b>LCD Display</b>  |   |   |  |
|     | <u>Battery Fault</u><br>Battery failure<br>Check/replace your battery   |    | <u>Battery Mode</u><br>UPS is operating with battery power                           |
|     | <u>Line Mode</u><br>UPS is operating with main power  |    | <u>Temperature</u><br>Display UPS current temperature (Celsius)                      |
|    | <u>Green Function</u><br>UPS operating in Green mode  |    | <u>UPS Fault</u><br>Internal fault occurred  |
|     | <u>Input</u><br>Indicating UPS input power for status display   |    | <u>Silence</u><br>UPS Silent mode enabled  |
|    | <u>Output</u><br>Indicating UPS output power for status display   |   | <u>Overloading</u><br>Output exceeds UPS capacity                                    |
|   | <u>AVR Buck</u><br>Correcting over-voltage condition<br>Output power remain normal  |  | <u>AVR Boost</u><br>Correcting under-voltage condition<br>Output power remain normal |
|   | <u>Battery power indication</u><br>0-20/21-40/41-60/<br>61-80/81-100% remaining   |  | <u>UPS Load Level</u><br>UPS on 0-20/21-40/41-60/<br>61-80/81-100% Load level        |
|   | <u>Standby Mode</u><br>UPS standby due to battery depletion or software setting Will return operational after power restore |  | <u>Battery</u><br>Indicating UPS battery for status display                          |
| <b>Button Display</b>   |   |   |  |
|  | <u>ON/OFF/TEST/Silence button</u><br>The master button for UPS control, refer to button peration                            |  | <u>Select Button</u><br>Use for UPS selection, refer to Button Operation             |

## Button operation

### Cold Start function

When the main power is disconnected from UPS, it is capable of starting with battery power for users' needs. Simply start the UPS as the instruction below.

#### "On/Off/Test/Silence" button

- Press and hold the button for 1 second to turn on UPS
- Press and hold the button for 3 seconds to turn off UPS during operation
- Press once to start self-test function during Line-Mode
- Press once to enable/disable alarm buzzer during Battery-Mode
- "Select" button

Press this button to view UPS information on LCD Display.

### Turn on the UPS

- Press the "ON" button until a single "beep" alarm disappeared or the LCD display turns on.
- Switch on the Load.

### Shut Down the UPS

- Switch off the Load.
- Press the "OFF" button for 3 seconds during Line/Battery-mode.
- (If applicable) To avoid electrical hazards, please turn off the internal/external input breaker. Then, turn off any external battery breaker and wait till all fans completely shut down.

### Green mode

The Green mode feature will enable UPS no-Load or light-load shutdown to maintain power consumption and battery life. During battery mode, the UPS will shut down approximately 4 min with no load/light load operating.

Green mode can also be enabled or disabled via monitoring software.

Green mode enable/disable: Press the "on" button twice. The UPS will switch mode and retain setting until the next manual adjustment

**Note:** UPS delivers with Green Mode disabled.

## 4.4 UPS Configuration

### UPS Manual test

Manual tests for UPS or battery can be conducted from the UPS configuration as well and are functional even when the UPS is not charging the battery.

**Simple test:** It's recommended to conduct a simple simulation test when

- The first use of UPS.
- Adding new loads.
- 6 months' regular check-up.

Switch on the UPS and wait for the power indicator to light up, then unplug UPS to simulate the main power failure.

Manual Battery Test: Press the "test" button once. UPS will automatically conduct a self-test. Please note that the UPS will briefly switch to battery mode.

## 4.5 UPS Status Display

UPS status shows in normal display mode. From here, you can go to the UPS meter display by pressing the button. Various measurements are available through UPS meters display; Pressing the button will scroll through the following meters.

| LCD message   | Description            |
|---|------------------------|
|  "xxx, V | Shows Output voltage   |
|  xx,x Hz | Shows Output Frequency |
|  xxx, V  | Shows Input AC voltage |
|  xx,x Hz | Shows Input Frequency  |

|   |                                       |
|---|---------------------------------------|
|  LOAD%= xx% | Shows Load % of max load              |
|  XX C      | Shows approximate ambient temperature |

## 4.6 UPS Configuration

### UPS Manual test

Manual tests for UPS or battery can be conducted from the UPS configuration as well and are functional even when the UPS is not charging the battery.

**Simple test:** It's recommended to conduct a simple simulation test when

1. The first use of UPS.
2. Adding new loads.
3. 6 months' regular check-up.

Switch on the UPS and wait for the power indicator to light up, then unplug UPS to simulate the main power failure.

Manual Battery Test: Press the "test" button once. UPS will automatically conduct a self-test. Please note that the UPS will briefly switch to battery mode.

## 5. UPS Monitoring Connection

UPSMON Pro software (Or other power monitoring software) can further utilize the UPS with warning reminders, monitoring, control shut down, and setting adjustments.

Using monitoring features requires connecting the UPS to a computer or the internet

### 5.1 Connect UPS to Computer with USB (Optional)/RS232 port.

- Locate the USB/RS232 port on UPS.
- Connect with factory-provided/approved communication cable
- Ensure your computer can install and support power management software.
- **Note:** Either USB Port or RS232 port, only one port will function at a time.

### 5.2 Connect UPS with interface Slot(Optional)

- **SNMP Card** allows UPS management and monitoring over a network or internet
- For more information, please contact for technical assistance.

### 5.3 UPS RS232 PORT

- The RS-232 interface uses a 9-pin female D-sub connector.
- The RS-232 port carries the data about utility, load, and UPS.  
The interface port pins and their functions are in the following table



| Pin # | Signal | Direction | Function                 |
|-------|--------|-----------|--------------------------|
| 2     | TxD    | Output    | TxD Output               |
| 3     | RxD    | Input     | RxD / Inverter Off Input |
| 5     | Common |           | Common                   |
| 6     |        | Output    | AC Fail Output           |
| 8     |        | Output    | Low Battery Output       |
| 9     |        | Output    | 12VDC Power              |

**Caution! Max rated values 12VDC**

## 6. Maintenance

Please read the following instruction to ensure your safety and maintain a longer product lifetime. This section contains detailed information about moving, maintaining, and placing the UPS. With a minimal amount of maintenance, you can expect the UPS to function smoothly.

### 6.1 Transportation

Please handle UPS with extreme caution since a high amount of energy is within the batteries. Keep the unit in position as marked on the packaging and never drop the unit.

### 6.2 Storage

Please read the following instructions if the UPS is not installed immediately:

- Store the equipment as is in its original packing and shipping carton.
- Do not store in temperatures outside the range of +15°C to +25°C.
- Protect the equipment from wet or damp areas and moist air.
- To maintain the vitality of the batteries, please recharges the UPS at least 8 hours every six months.

### 6.3 Operation

**CAUTION:** Ensure that all environmental concerns and requirements are met according to safety instruction; otherwise, the safety of installation personnel cannot be guaranteed since the unit may malfunction.

- Please ensure no flammable substances such as gases or fumes.
- Avoid extreme temperature and humidity. Protect the equipment from moisture.
- Ensure there is enough space (300mm or above recommended) at the rear and side of UPS for proper ventilation.
- Ensure that the front of the UPS remains clear for user operation.
- **Only** authorized agents or technicians may service the unit.
- **Do not** open the UPS cabinet. Components may contain hazardous or fatal voltage.
- Output receptacles may carry live voltage without connecting to the main power.
- Pay special attention to UPS air inlet; **do not** let it covered by dust.

### 6.4 Battery

#### 6.4.1 Maintenance

The reliability of the battery is heavily related to the environmental issue.

At the temperature of 25 degrees Celsius, A regular 6-12 months' checkup is advised.

#### 6.4.2 Replacement

**Caution: Read safety instruction before proceeding.**


In all the following steps and factory stander:

The **black** battery cable is the **negative (-)** pole

The **red** battery cable is **positive (+)** pole

**Caution:** Avoid battery positive port directly contacts with metal. (including UPS cover)

### 1-3KVA LCD

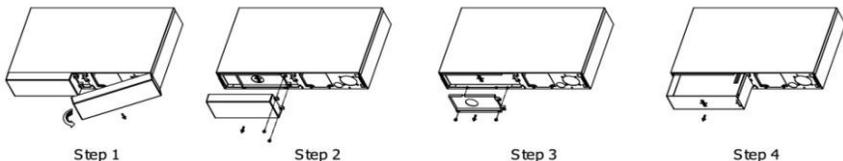

**Caution:** Do not remove the battery during battery-mode.

1. Ensure the UPS is turned off and disconnected from the main power.
2. From the middle of the front panel, hold the **non-display** side corner and pull out lightly. Then, push sideways to unlock the other tenon.
3. Remove the battery cover, disconnect battery cable, then remove the battery.
4. Replace with the same type and quantity of battery.
5. Reinstall battery into the UPS.
6. Reinstall the battery cover and front panel.

## APP-A. Troubleshooting

Troubleshooting procedures give simple instructions in determining UPS malfunctions. Start the troubleshooting procedure if you witness any alarm indication.

### Alarm

The UPS has an audible alarm. When different situations occurred, UPS will alert users with display and buzzer.

#### Battery-mode (Slow alarm)

During battery mode, the alarm will beep every 4 seconds. The alarm will stop when UPS return to Line-mode.

#### Battery-Low (Rapid alarm)

During Battery-low (less than 30%), the UPS will beep every 1 second. The alarm will stop when UPS shutdown or returns to Line-mode.

#### Overload/Fault (Constant alarm)

When UPS operating with load exceeded its maximum capacity, UPS will emit a continuous alarm to warn an overload condition. UPS will automatically turn off to protect your essential load. Please consider remove or shutdown less-essential loads.

Also, when the unit encounters other problems (battery failure, charger failure), the unit emits the alarm. Please refer to the function description and troubleshooting chart to identify the precise cause.

### Silencing Alarm

Here is the instruction to mute the active alarm or future alarm notification:

**Note:** During battery-mode, if the battery is low on power, the alarm will sound regardless of silent-mode enable/disable.

Silent alarm Enable/Disable: Press the "on" button during the Battery-Mode alarm.

If troubleshooting does not include or resolve your situation, feel free to contact for technical assistance.

| PROBLEM   | POSSIBLE CAUSE  | Solutions  |
|---|---|--|
| UPS can't operate switching on. No lights on, no warning sound        | Power source mistake or low battery power                           | Check the main power connection<br>If operating with battery power, ensure enough charging time for UPS                      |
|   | Time of pressing the button is too short                            | Press and hold the "ON" button for a longer duration   |
|   | Output short circuit or overload on UPS                             | Turn off UPS and take off all load. Check for any potential internal short circuit<br>Then attempt to turn on UPS again      |
|   | Hardware failure  | Contact for technical assistance   |
|   | Battery out of order  | Replace battery or contact for technical assistance  |
| UPS always remain on battery-mode regardless of main power connection | No power source input   | Check the main power source and cable  |
|   | Fuse melted or Circuit breaker tripped                              | Reset the breaker or replace the fuse (spare fuse is in UPS inlet.)<br>then restart the UPS                                  |
|   | The main voltage is out of the UPS input range                      | UPS function normally, check your main power voltage   |
| Overload/Fault indicator lit or constant buzzer beeping               | UPS load exceed the capacity<br>UPS overloading                     | Remove or shut down the less essential load  |
| Battery mode duration below expectation                               | Batteries aren't fully charged<br>Batteries are worn out or faulted | Ensure enough recharge time for UPS<br>Run a self-test to check battery status<br>Replace UPS battery if the problem remains |
|   | The charger is out of order   | Contact for technical assistance   |
|   | Green mode enabled<br>No-load or light load shutdown engaged        | Operation normal.<br>Turn off green mode to disable such function  |
| The battery fault indicator occurred                                  | Battery not connected   | Check the UPS batteries;<br>make sure they are well connected  |
|   | Battery out of order or damaged                                     | Replace battery  |

## APP-B Technical Specifications

| Model                                 | 1000A<br>1000A LCD                               | 1500A<br>1500A LCD | 2000A<br>2000A LCD | 3000A<br>3000A LCD |
|---------------------------------------|--|--------------------|--------------------|--------------------|
| <b>Configuration</b>                  |  |                    |                    |                    |
| Capacity (VA)                         | 1000 VA  | 1500 VA            | 2000 VA            | 3000 VA            |
| Capacity (Watts)                      | 900 W  | 1350 W             | 1800 W             | 2700 W             |
| Form                                  | Rack Tower Type                                  |                    |                    |                    |
| <b>Input</b>                          |  |                    |                    |                    |
| Voltage                               | 220 / 230 / 240 VAC                              |                    |                    |                    |
| Input Voltage Range                   | 150 - 310 VAC                                    |                    |                    |                    |
| Input Frequency Range                 | 50 Hz / 60 Hz (Auto Sensing)                     |                    |                    |                    |
| <b>Output</b>                         |  |                    |                    |                    |
| Waveform                              | Pure Sine Wave                                   |                    |                    |                    |
| Voltage                               | 220 / 230 / 240 VAC                              |                    |                    |                    |
| Transfer Time                         | 2-4 ms (Typical)                                 |                    |                    |                    |
| <b>Protection</b>                     |  |                    |                    |                    |
| Full Protection                       | Overload, Surge, Short Circuit, EMI / RFI Filter |                    |                    |                    |
| Tele Communication                    | RJ11 / RJ45                                      |                    |                    |                    |
| <b>Battery</b>                        |  |                    |                    |                    |
| Type                                  | 12V 9Ah  | 12V 7Ah            | 12V 9Ah            | 12V 9Ah            |
| Quantity                              | 2  | 4                  | 4                  | 6                  |
| Sealed, Maintenance Free              | Yes  |                    |                    |                    |
| Typical Recharge Time                 | 3 hr to 90%                                      |                    |                    |                    |
| <b>Management &amp; Communication</b> |  |                    |                    |                    |
| Indicator                             | LCD Panel  |                    |                    |                    |
| Communication Port                    | RS232 , USB B type, SNMP (Option)                |                    |                    |                    |
| <b>Physical</b>                       |  |                    |                    |                    |
| Dimensions (WxDxH) (mm)               | 428 x 426 x 84                                   | 428 x 557 x 84     |                    | 428 x 663 x 84     |
| Weight (kgs)                          | 16.7   | 24                 | 27.5               | 36.8               |
| Shipping Dimensions (mm)              | 577 x 590 x 221                                  | 577 x 720 x 211    |                    | 577 x 826 x 211    |
| Shipping Weight (kgs)                 | 20.5   | 27.9               | 31.5               | 41.6               |
| <b>Alarm</b>                          |  |                    |                    |                    |
| Overload / Fault                      | Continuous Beeping                               |                    |                    |                    |
| Battery Mode                          | Beep every 4 seconds                             |                    |                    |                    |
| Low Battery                           | Beep every 1 second                              |                    |                    |                    |
| <b>Environment</b>                    |  |                    |                    |                    |
| Operating Humidity                    | 0-90 % RH at 0-40°C (Non-condensing)             |                    |                    |                    |
| Audible Noise                         | Less than 50 dB                                  |                    |                    |                    |

\* Specifications are subject to change without further notice.

\* Specifications are for reference; actual information should be based on the real product.

20240301